

INSTALLATION INSTRUCTIONS

CONSTRUCTION KIT :

BOX 1/2

BOX 2/2

FINISHING KIT :


BOX 3



EASY DISTRIBUTION SYSTEM
3 BOX SYSTEM



EN

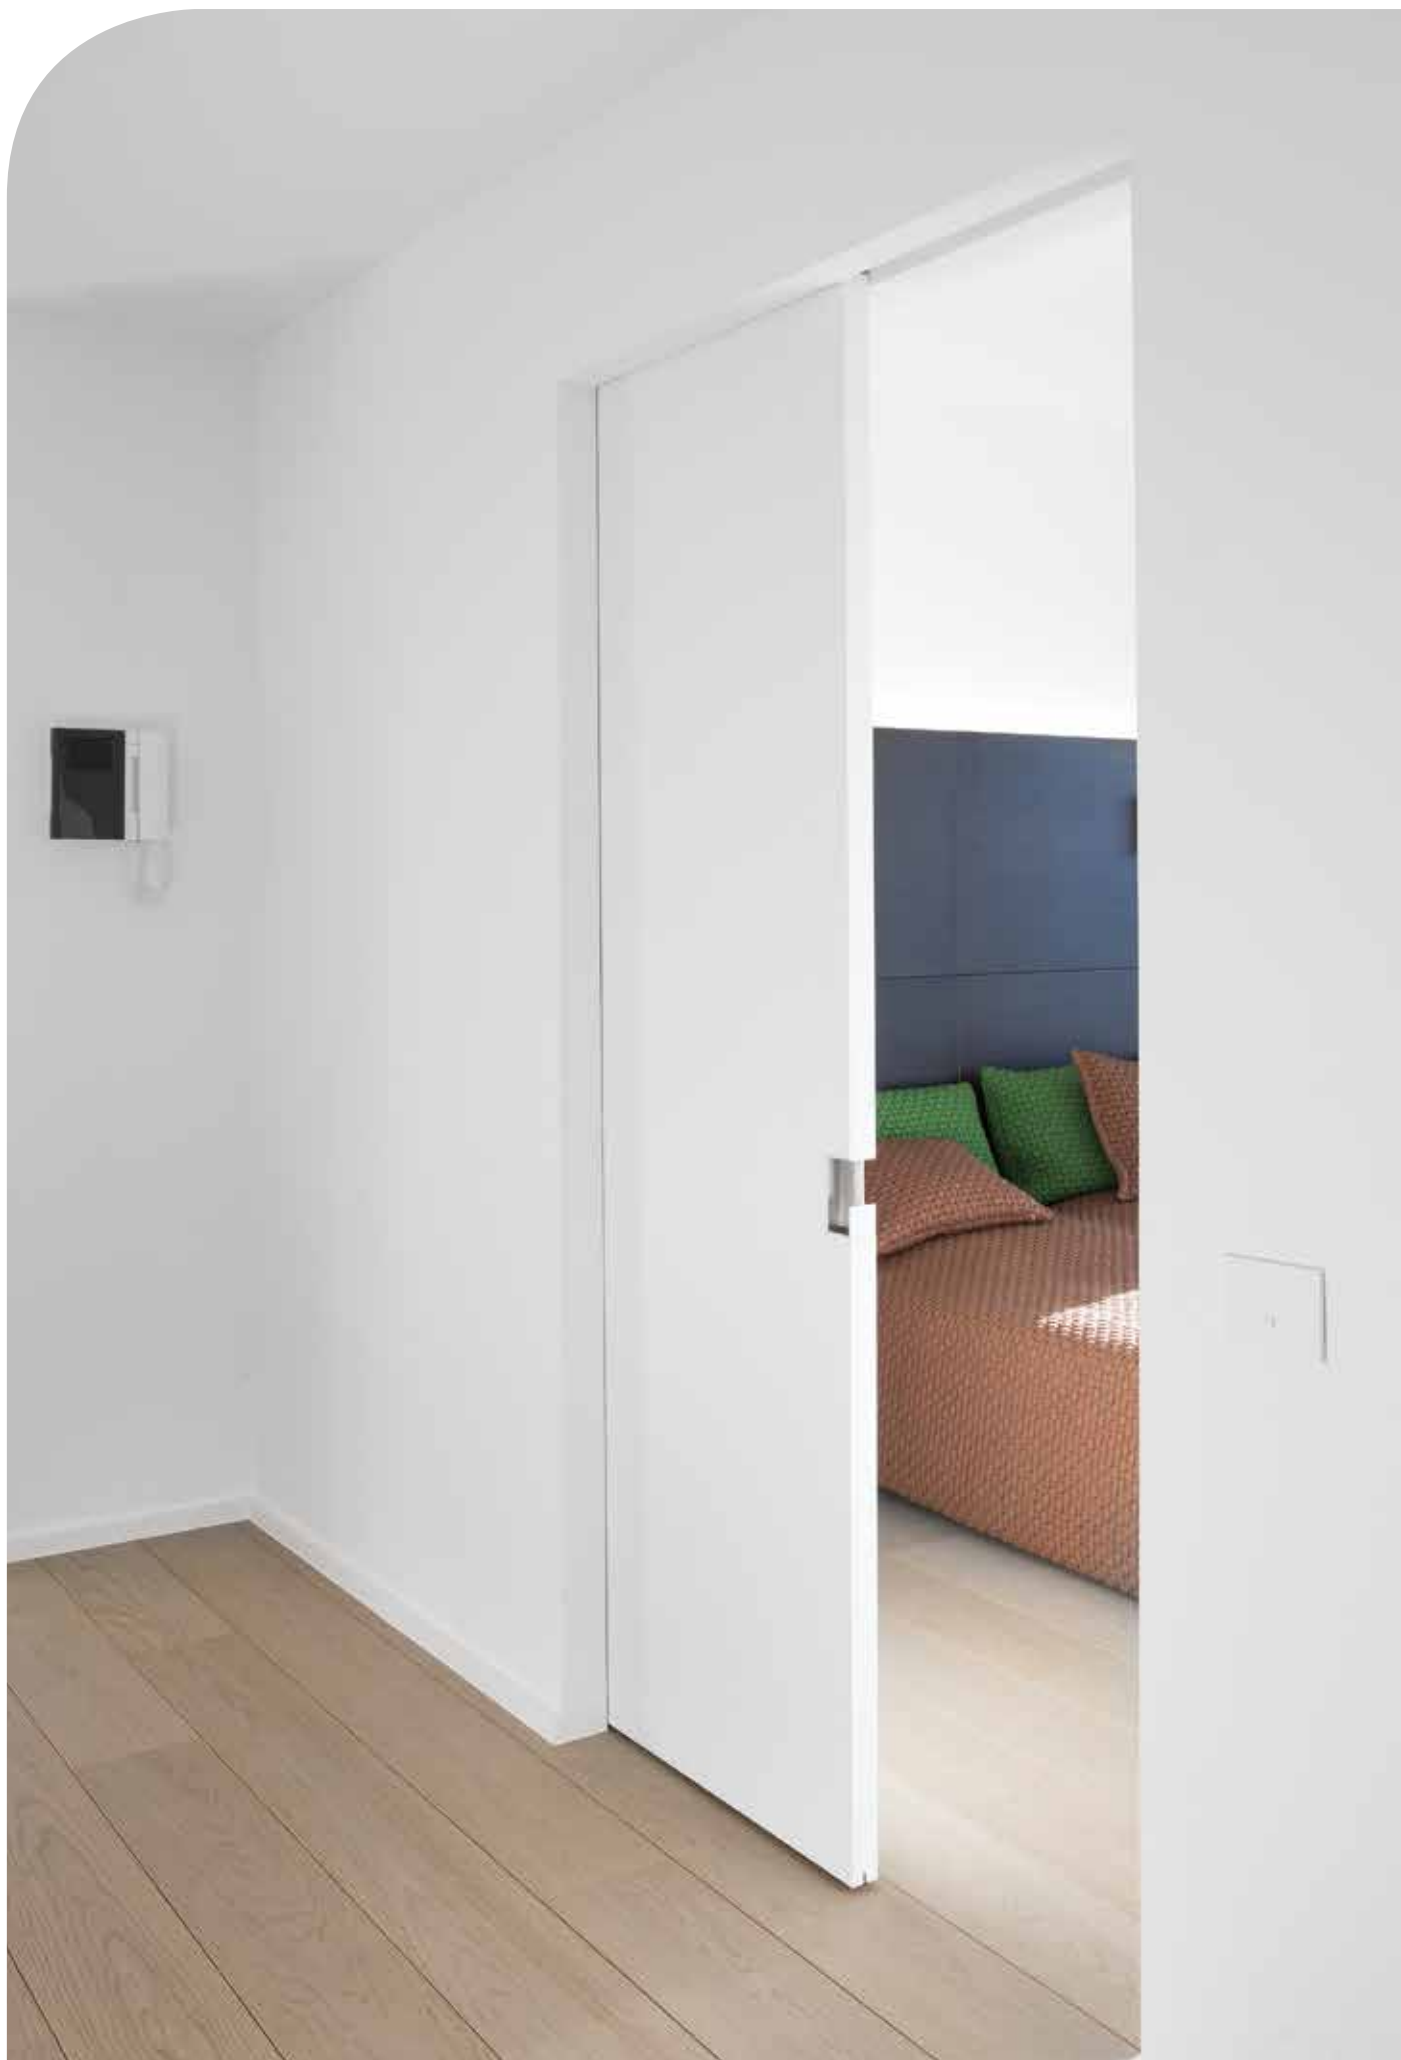


X5 WOOD - INSTALLATION INSTRUCTIONS


TECHNICAL INFO

door thickness	Xinnix system	construction stud wall	Fw: finished wall thickness	maximum door size
25 - 40 mm	X5	Ω 75	100 mm	2100 x 1000 mm
25 - 40 mm	X5D	Ω 75	125 mm	2300 x 1000 mm
40 - 60 mm	X5	Ω 100	125 mm	2100 x 1000 mm
40 - 60 mm	X5D	Ω 100	150 mm	3000 x 3000 mm


SINGLE - DOUBLE PLATING

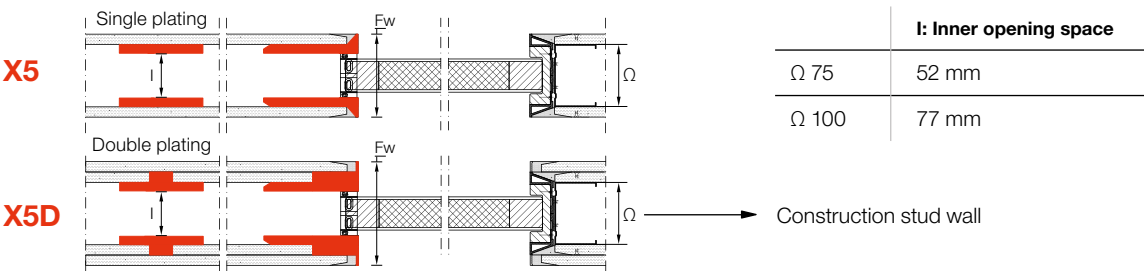

OPENING CONSTRUCTION STUD WALL

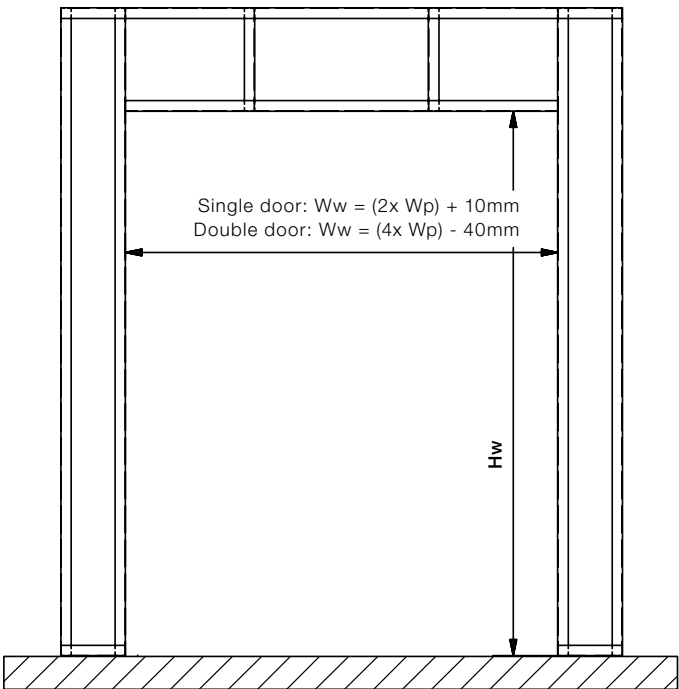

FINISH

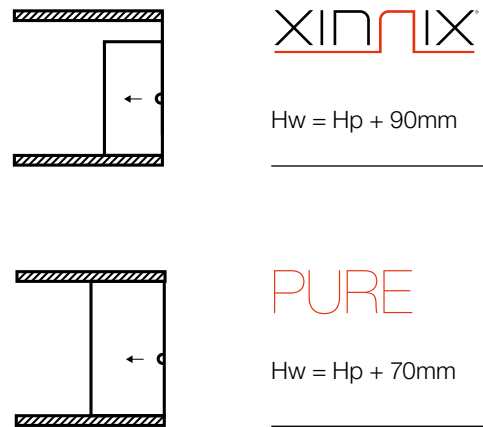


TRACK + HARDWARE

- Xinnix Selection
- S-Line : HAWA-Junior 80


Ww : Width construction wall
Hw : Height construction wall
Wp : Width door panel
Hp : Height door panel

X5 WOOD - INSTALLATION INSTRUCTIONS: SINGLE DOOR


1 BEAM [C] + TRACK [R] + BASEPLATE [BP] + STOP IN TRACK [ST]

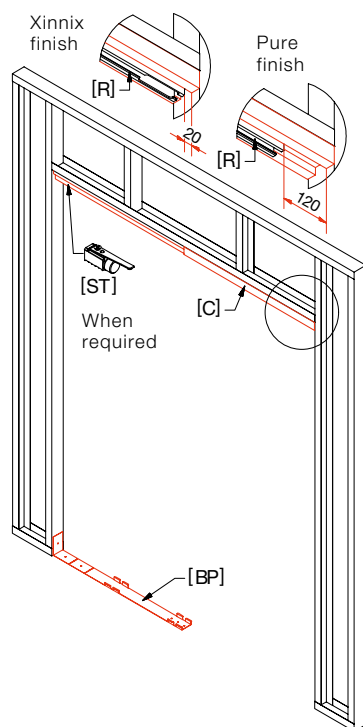


2 UPRIGHTS [U] + BRUSH HOLDERS [BH]

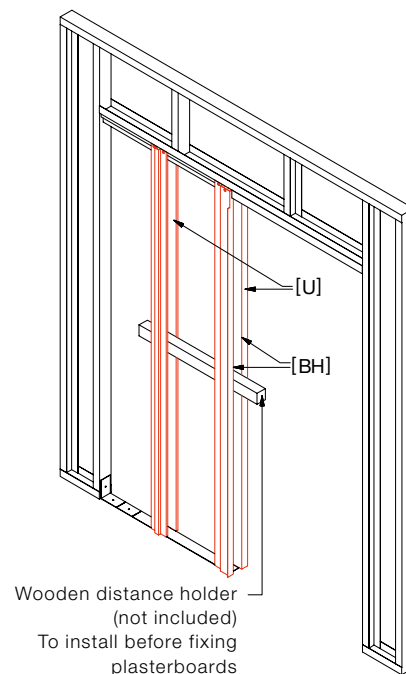

3 FINISH [B] + GASKETS [G]

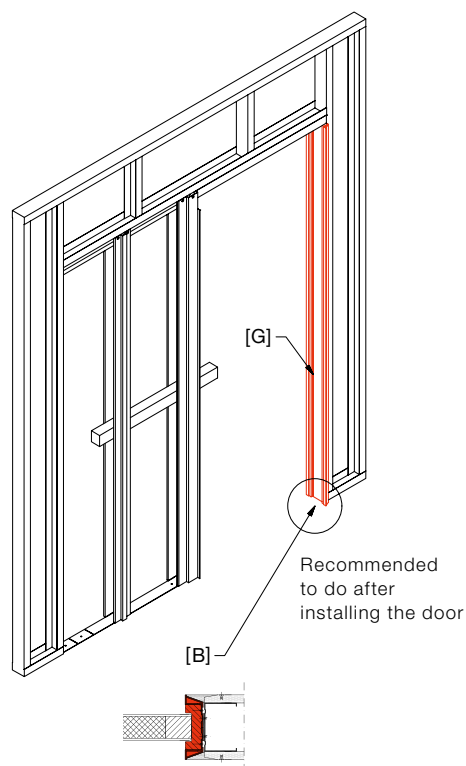


4 SINGLE - DOUBLE PLATING

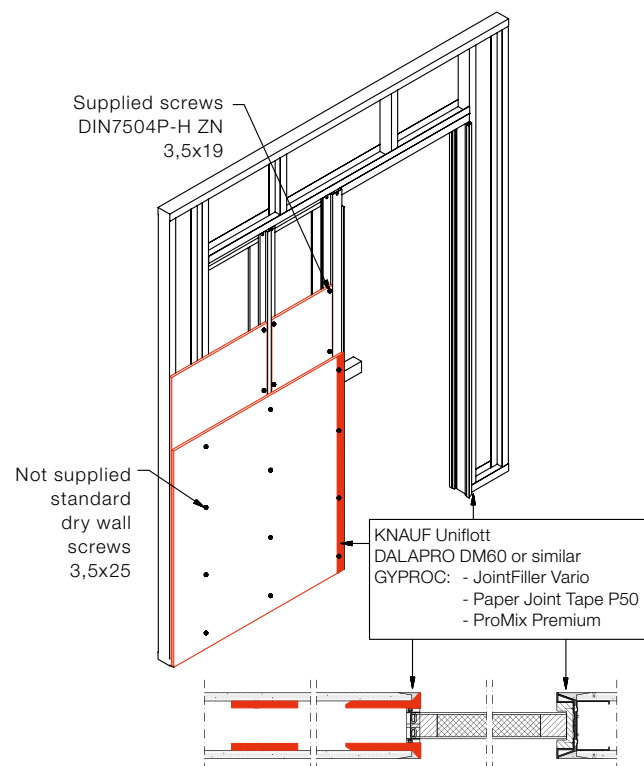


X5 WOOD - INSTALLATION INSTRUCTIONS: SINGLE DOOR FORMULAS

DOOR PANEL

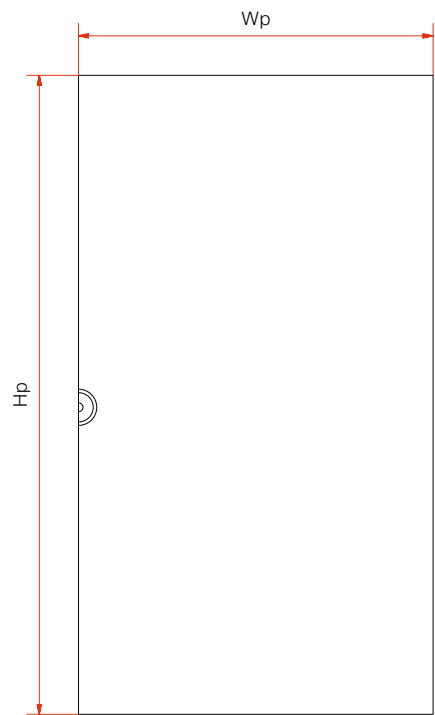


1 ADAPTING BEAM [C] + TRACK [R]

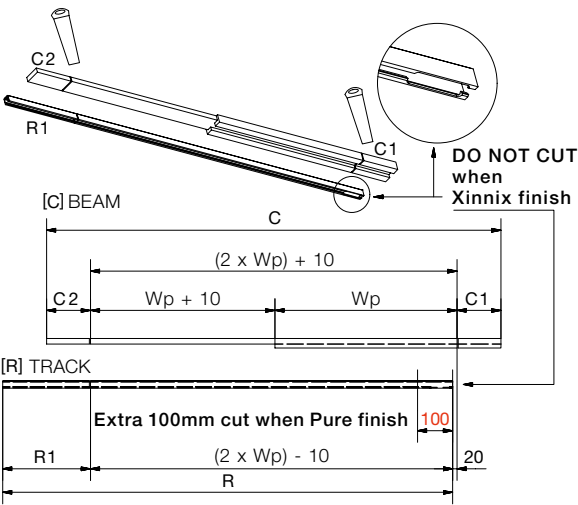


C	Wp	C1	C2	R	R1	Passage Width
2070	630	400	400	2050	800	600
	730	300	300		600	700
	830	200	200		400	800
	930	100	100		200	900
	1030	-	-		-	1000
2470	1130	100	100	2450	200	1100
	1230	-	-		-	1200
3070	1330	200	200	3050	400	1300
	1430	100	100		200	1400
	1530	-	-		-	1500
Fixed dimensions						
1670	830	-	-	1650	-	800
1870	930	-	-	1850	-	900

2 UPRIGHTS X5 - X5D [U]

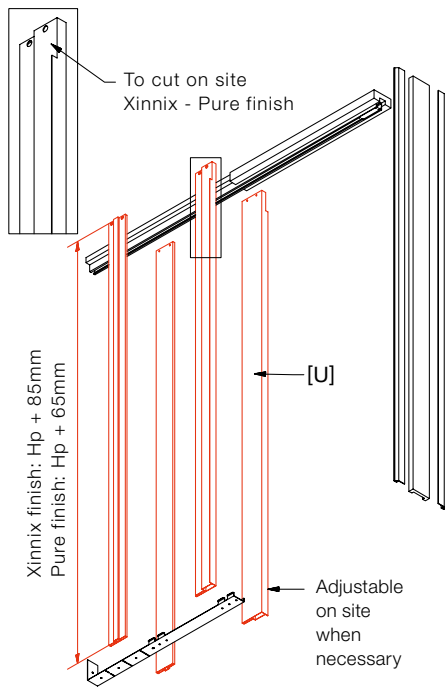


3 FINISH [B]

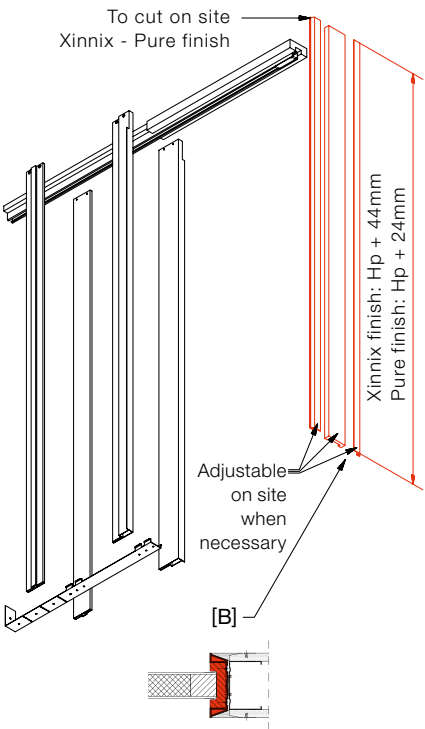


X5 WOOD - INSTALLATION INSTRUCTIONS: DOUBLE DOOR


1 BEAMS [C] + TRACKS [R] + BASEPLATES [BP] + STOPS IN TRACK [ST]

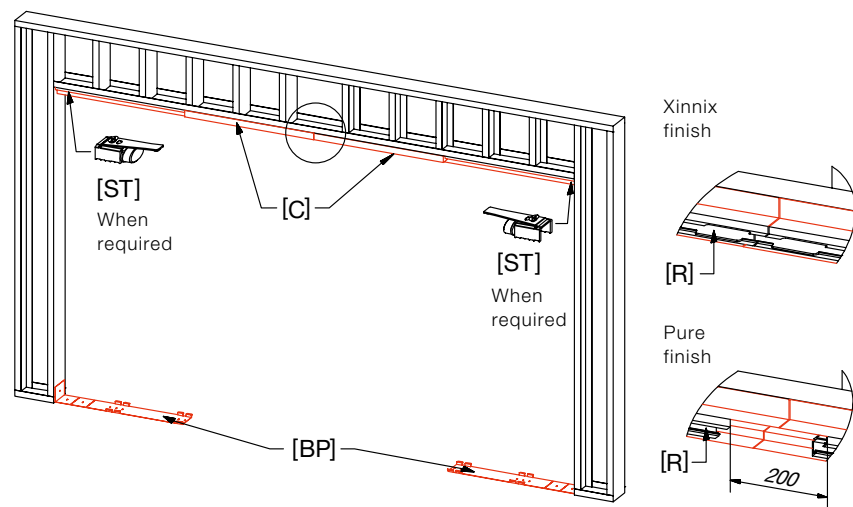

2 UPRIGHTS X5 - X5D [U] + BRUSH HOLDERS [BH]

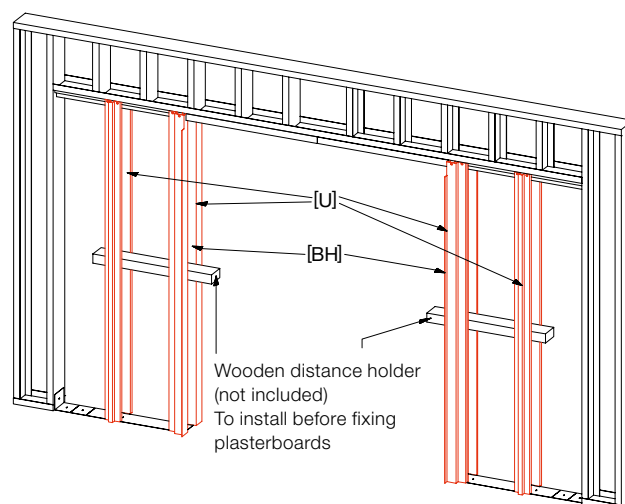


3 SINGLE - DOUBLE PLATING

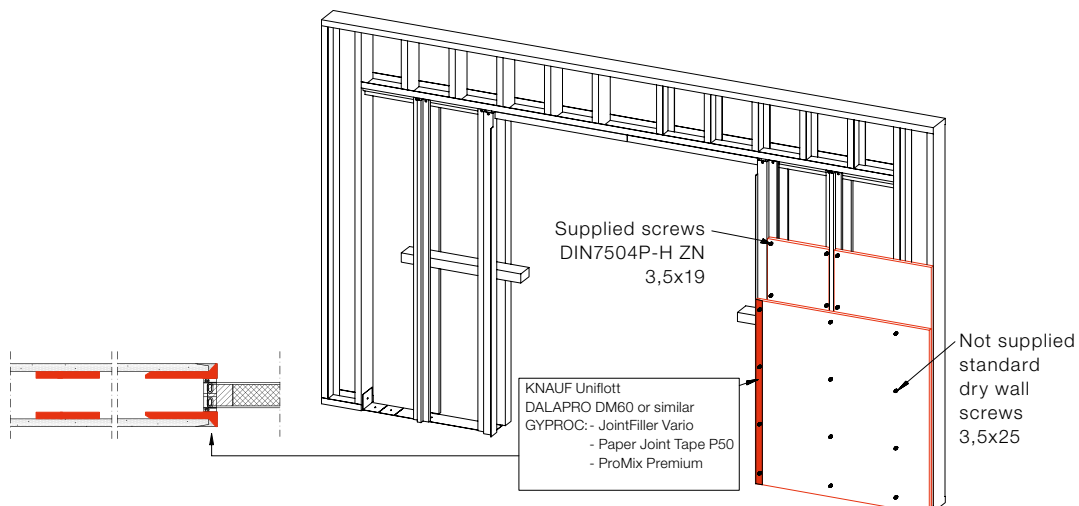


X5 WOOD - INSTALLATION INSTRUCTIONS: DOUBLE DOOR FORMULAS


2 x IDENTICAL DOOR PANEL

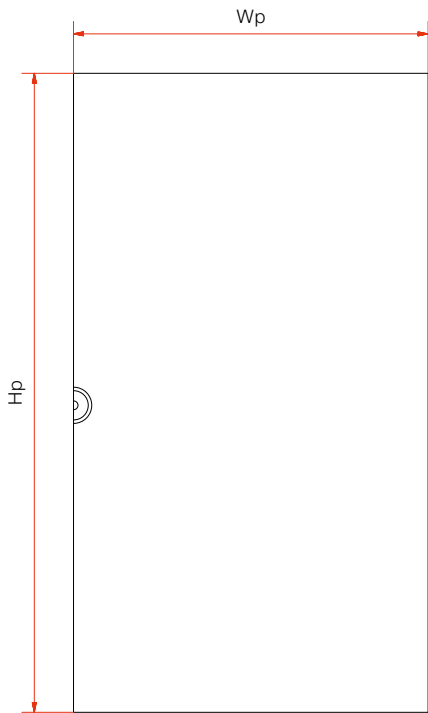

1 ADAPTING BEAMS [C] + TRACKS [R]



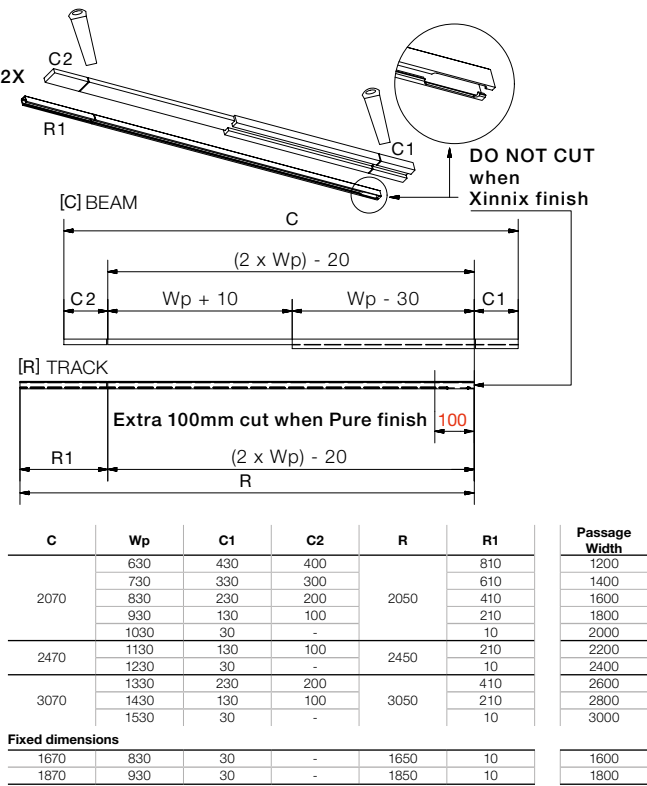


2 UPRIGHTS X5 - X5D [U]

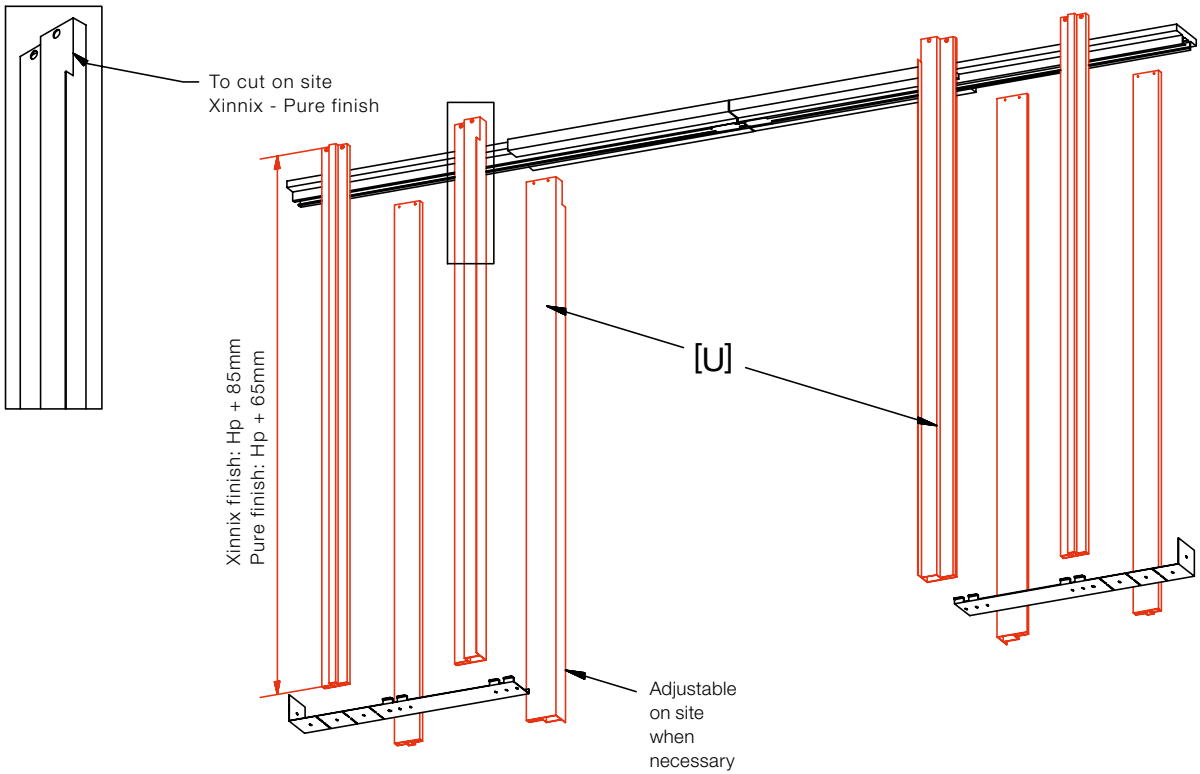


X5 WOOD - INSTALLATION INSTRUCTIONS: FINISH




SINGLE DOOR

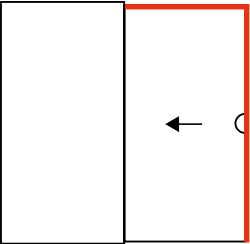	TO INDICATE WHEN ORDERING	 XINNIX	 PURE
	PLATING	X5 - X5D	-
	PASSAGE HEIGHT	2300 - 2700 - 3000 mm	2300 - 2700 - 3000 mm
	WALL THICKNESS	100 - 125 - 150 mm	100 - 125 - 150 mm
	DOOR THICKNESS	...	...
	PASSAGE WIDTH	< 1000 mm (1) * 1000 - 2000 mm (2) * 2000 - 3000 mm (3) *	-
	TYPE	-	Xinnix selection / S-line Hawa

* number of finish profiles **A**

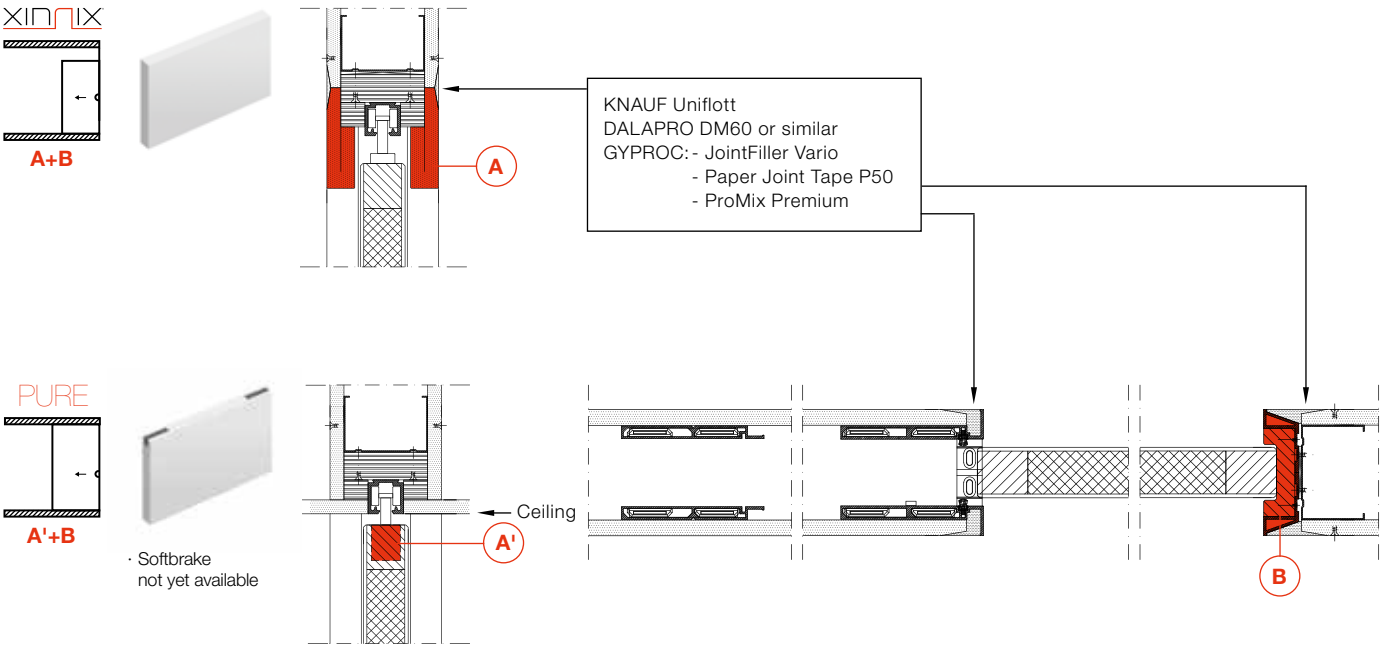

DOUBLE DOOR

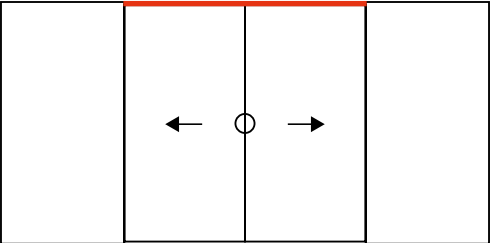

	TO INDICATE WHEN ORDERING	 XINNIX	 PURE
		ONLY 2x PART A	ONLY 2x SET A'
	PLATING	X5 - X5D	-
	PASSAGE WIDTH	< 2000 mm (2) * 2000 - 4000 mm (4) * 4000 - 6000 mm (6) *	-
	TYPE	-	Xinnix selection / S-line Hawa

* number of finish profiles **A**



X5 WOOD - INSTALLATION INSTRUCTIONS: DOOR XINNIX SELECTION

DOOR FOR XINNIX SELECTION + XINNIX FINISH

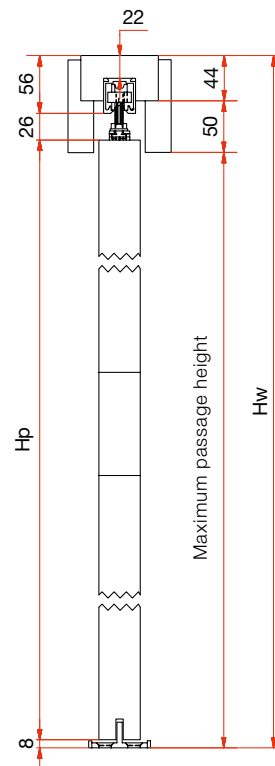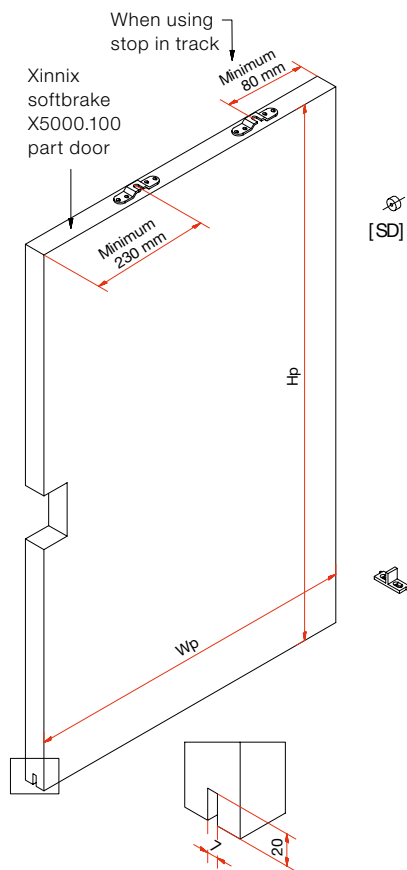


Hardware:
Xinnix selection

Finish: Xinnix



Bottom guide: Xinnix
 $Hw = Hp + 90mm$

Maximum Passage height
 $= Hp - 4mm$

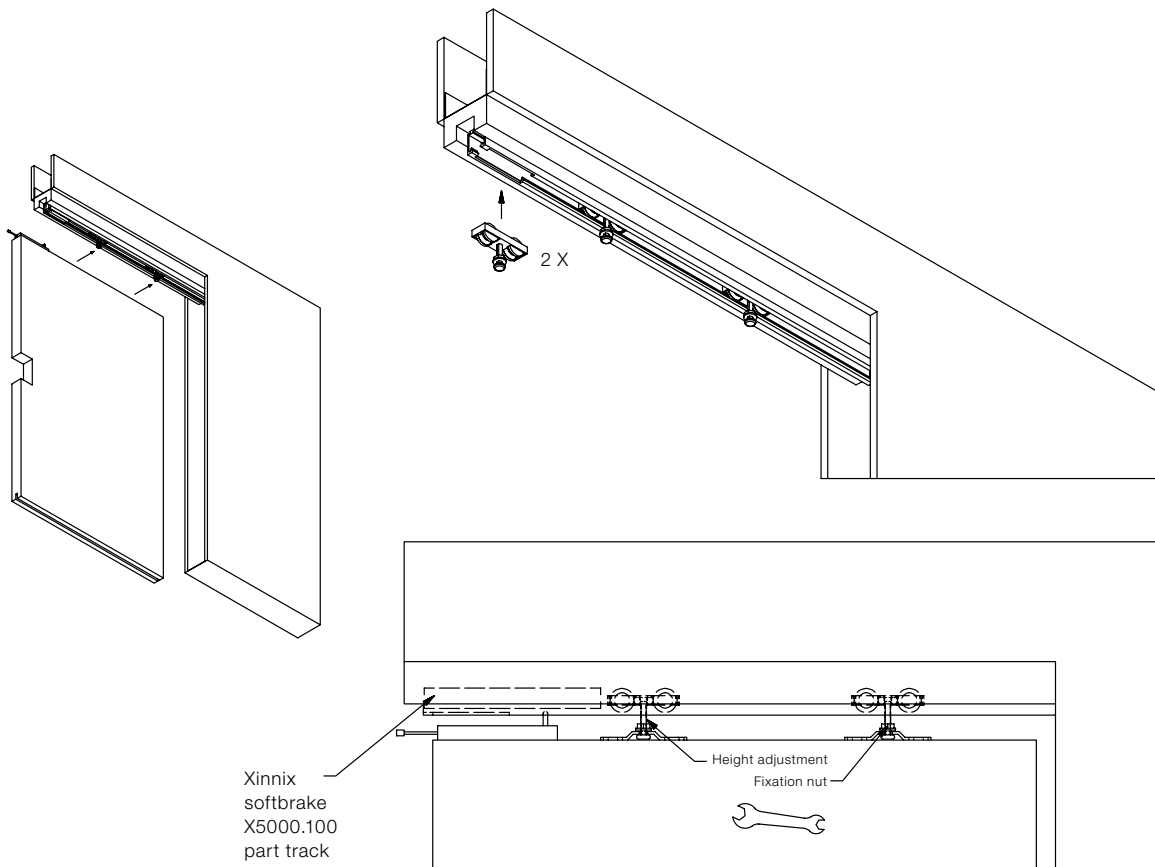

X5 WOOD - INSTALLATION INSTRUCTIONS: DOOR XINNIX SELECTION

DOOR FOR XINNIX SELECTION + PURE FINISH


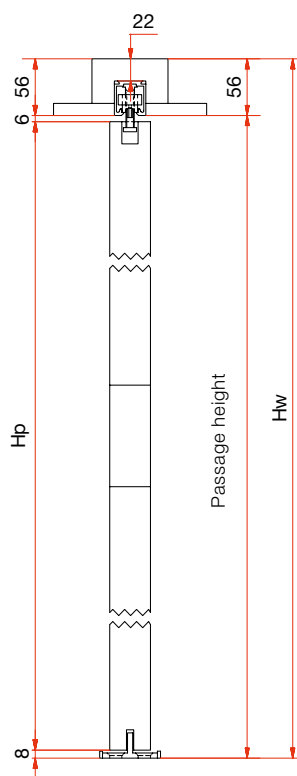
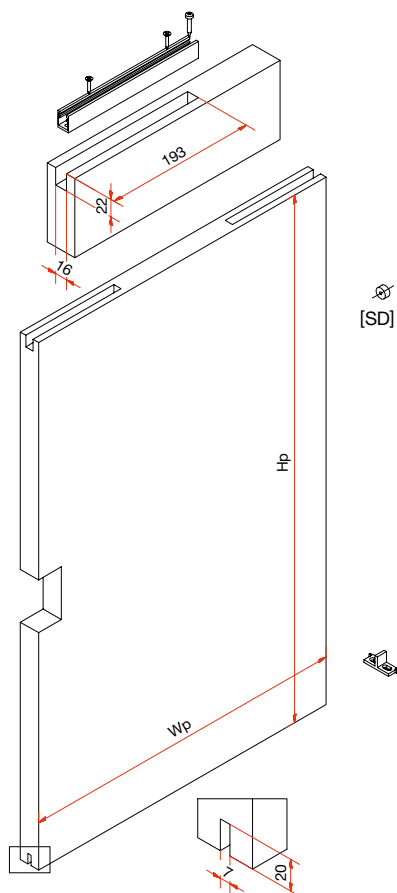


Hardware:
Xinnix selection Pure

Finish: Pure


Bottom guide: Xinnix
 $H_w = H_p + 70mm$

Passage height
 $= H_p + 14mm$

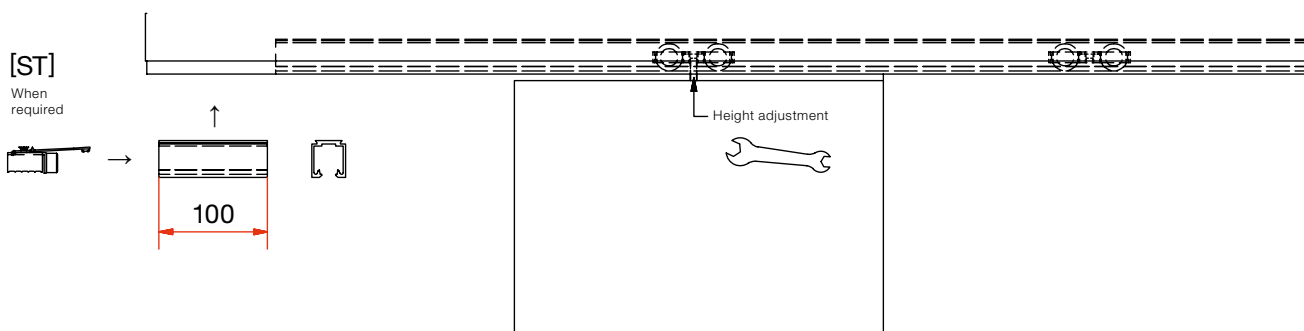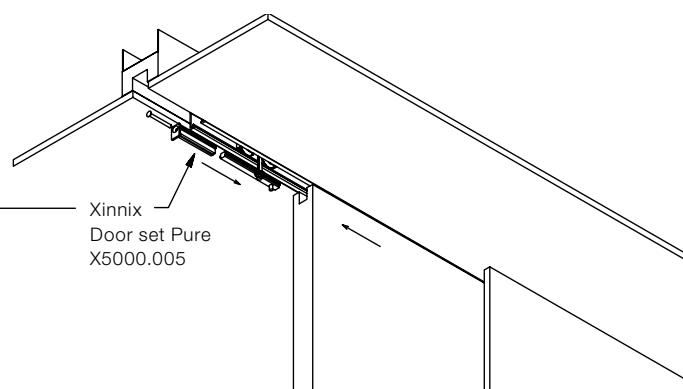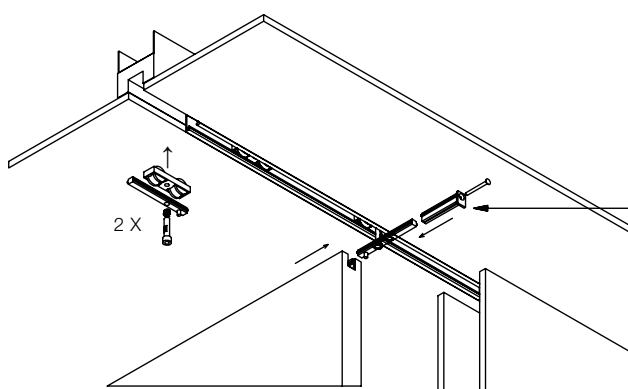

X5 WOOD - INSTALLATION INSTRUCTIONS: DOOR S-LINE SELECTION

DOOR FOR HAWA-JUNIOR 80/Z + XINNIX FINISH

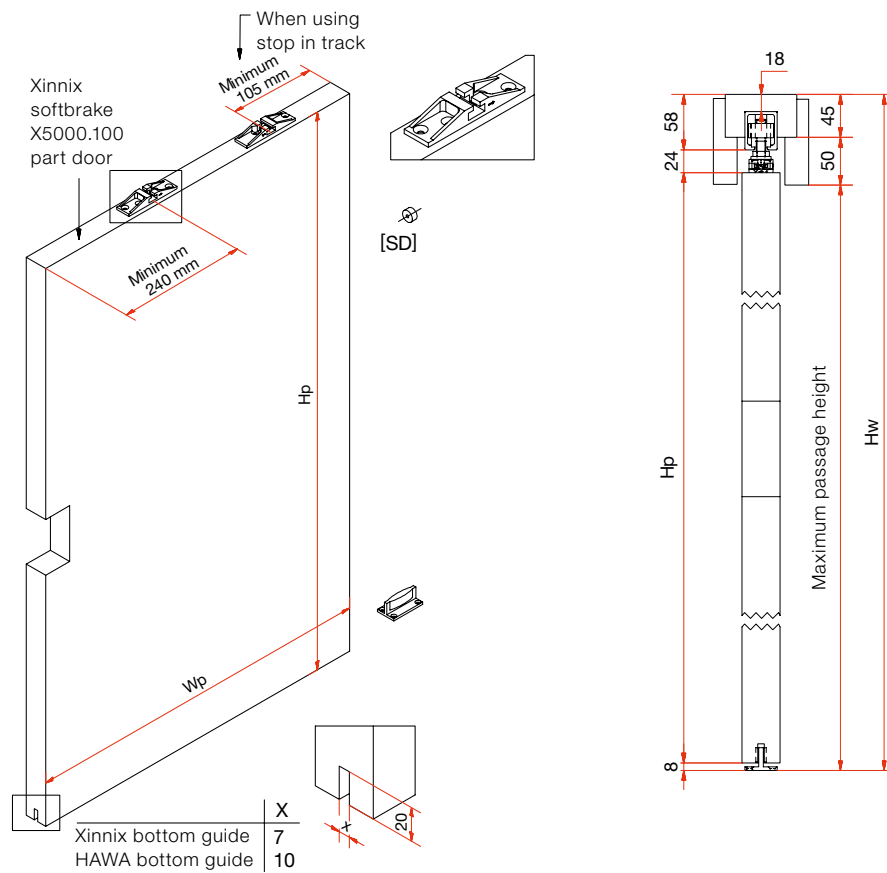


Hardware:
HAWA-Junior 80/Z

Finish: Xinnix



Bottom guide: Xinnix / HAWA
 $Hw = Hp + 90mm$

Maximum Passage height
 $= Hp - 5mm$

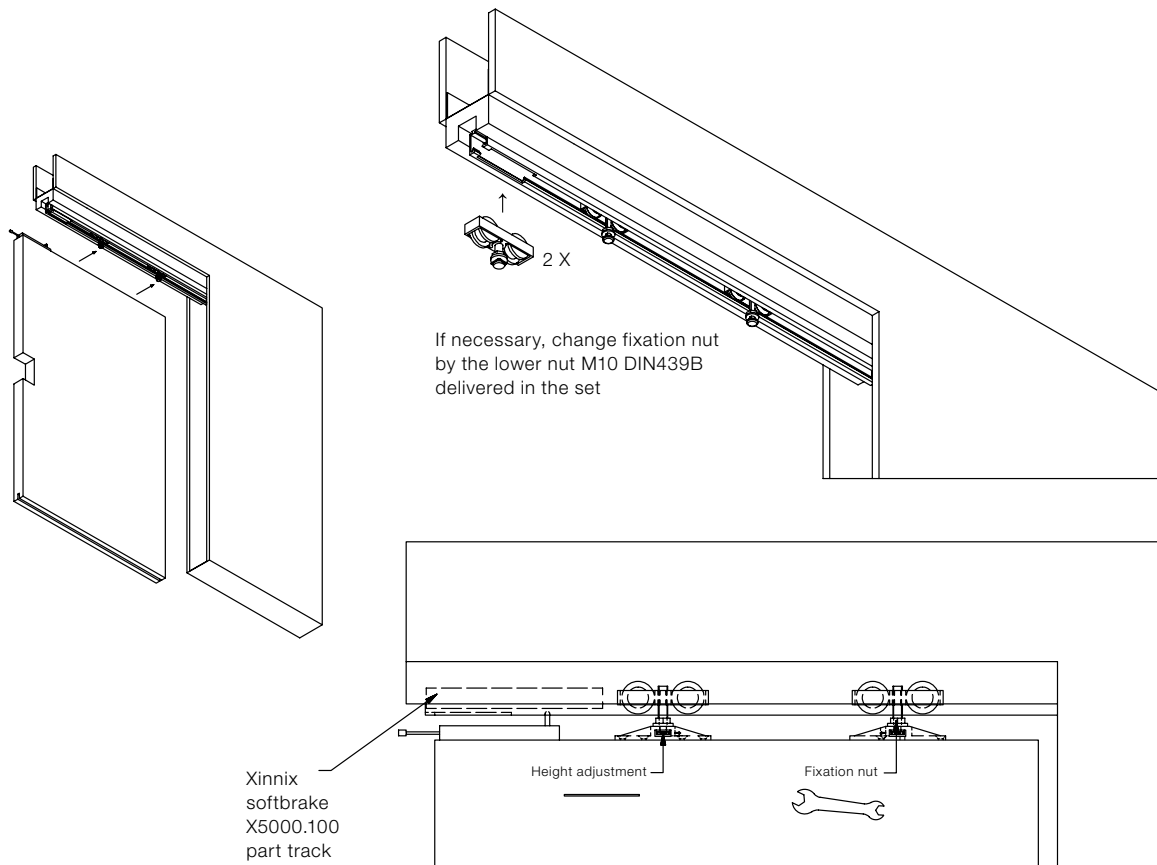

X5 WOOD - INSTALLATION INSTRUCTIONS: DOOR S-LINE SELECTION

DOOR FOR HAWA-JUNIOR 80/B + PURE FINISH


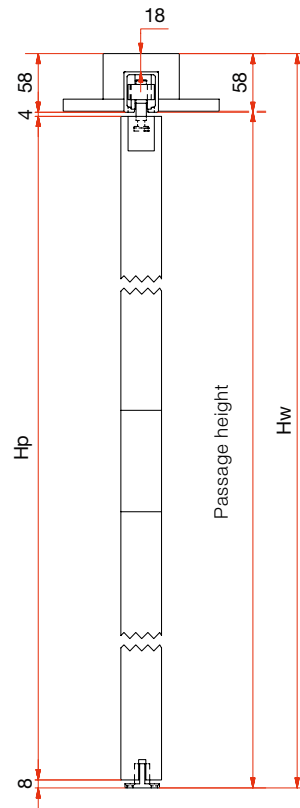
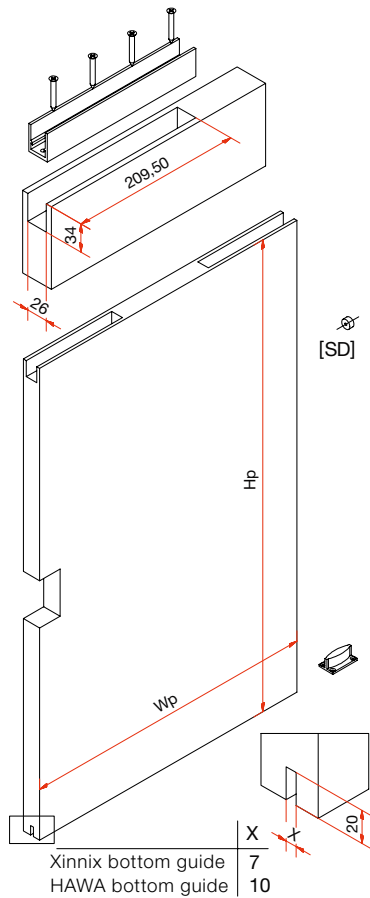


Hardware:
HAWA-Junior 80/B

Finish: Pure


Bottom guide: Xinnix / HAWA
 $Hw = Hp + 70\text{mm}$

Passage height
 $= Hp + 12\text{mm}$

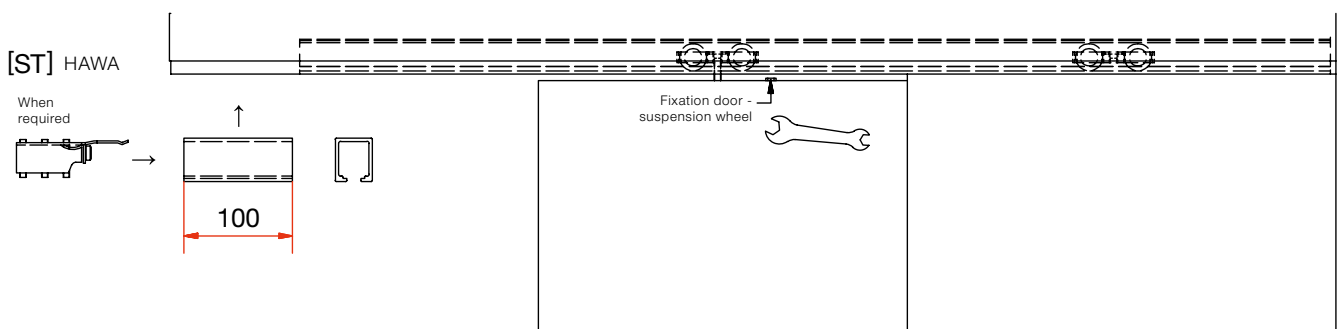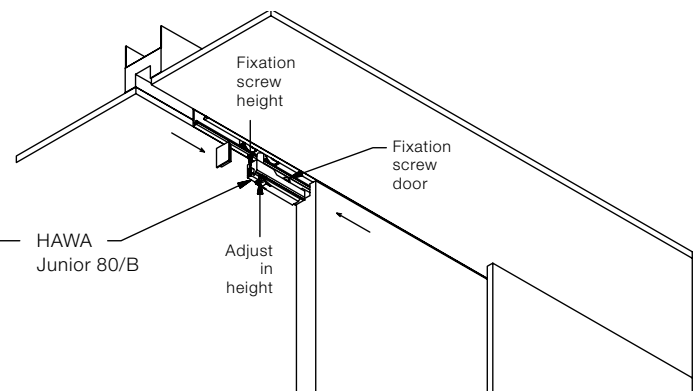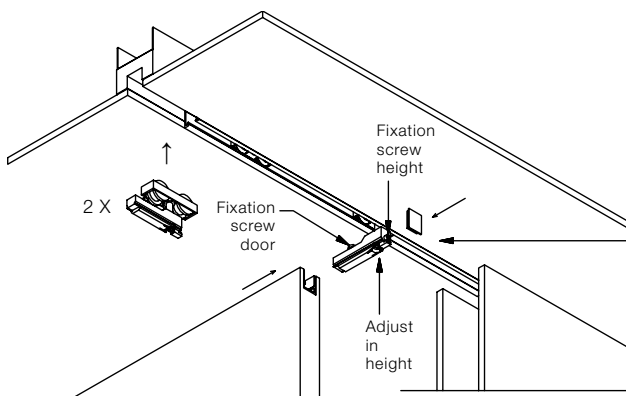


X5 WOOD - INSTALLATION INSTRUCTIONS: SOFTBRAKE X5000.100

DIMENSIONS - CAPACITY MAX 25/80 KG

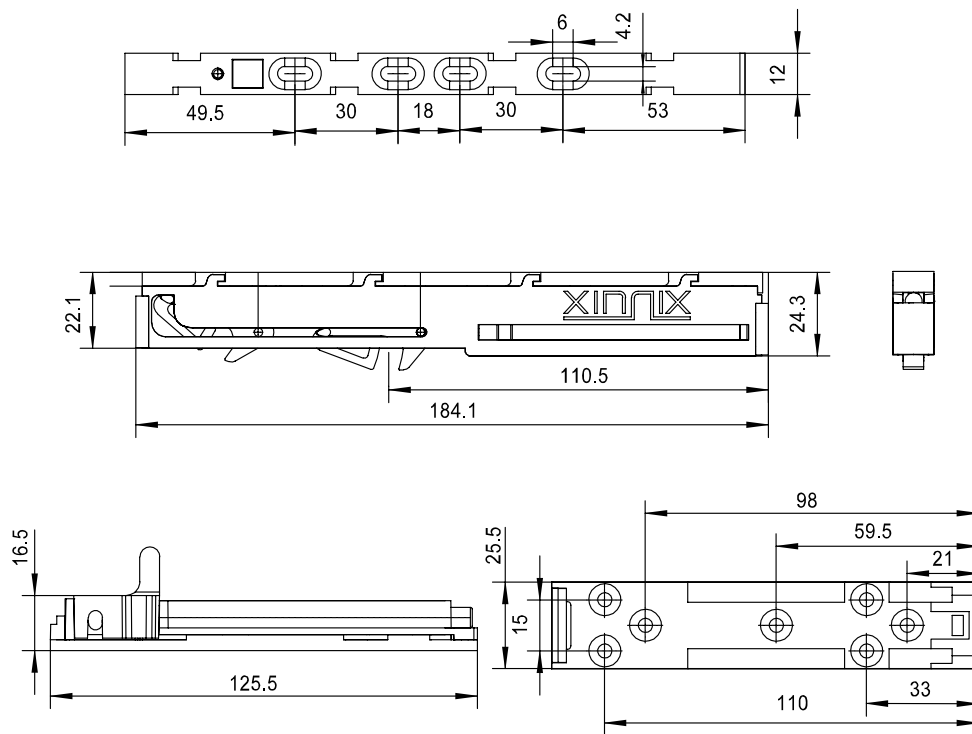


GENERAL INSTALLATION VIEW (MORE DETAILS SEE BOX X5000.100)

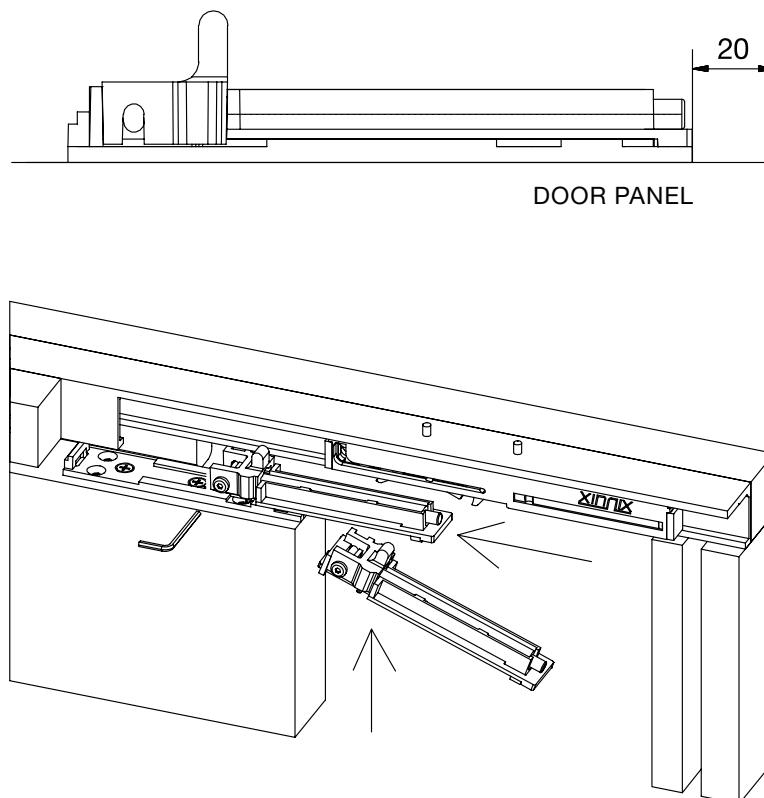


X5 WOOD - INSTALLATION INSTRUCTIONS: LIST PARTS

BOX 1: CONSTRUCTION KIT

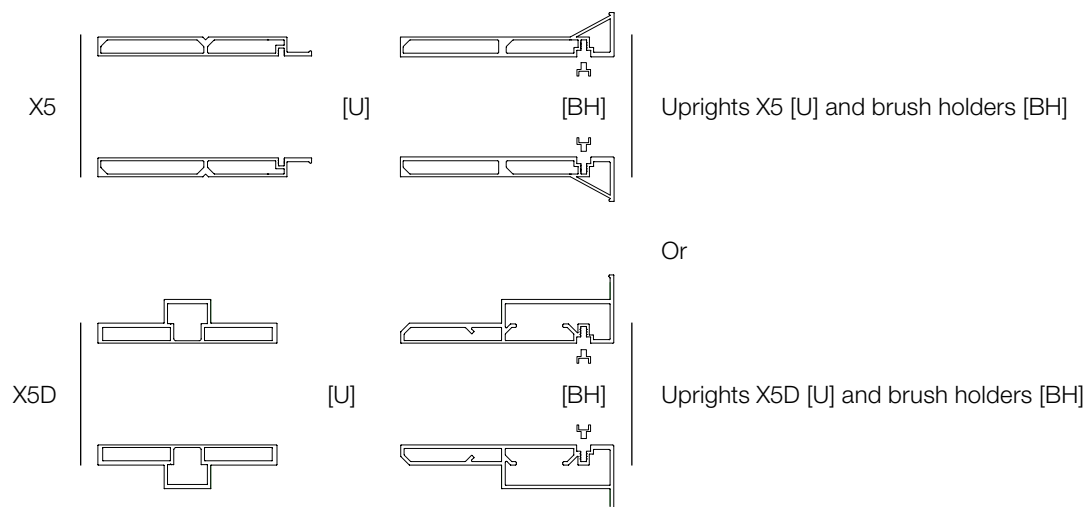

BOX 2: CONSTRUCTION KIT

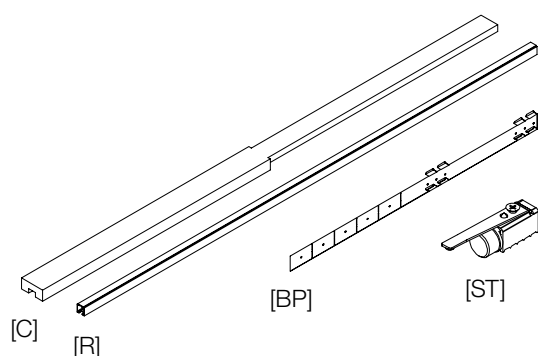

[C]: Beam for Xinnix or HAWA track

[R]: Xinnix or HAWA track

[BP]: Baseplate

[ST]: Xinnix or HAWA door stop

Standard brushes construction stud wall Ø75: 5 mm (on request 9-15 mm)

Standard brushes construction stud wall Ø100: 19 mm (on request 9-15 mm)

Screws DIN 7981 3,5x20 mm for fixing the uprights




Screws DIN 7504 3,5x19 mm for fixing the plasterboard

Sliding door gear, bumper [SD], installation key and softbrake:

Xinnix Selection or S-Line: HAWA Junior-80



BOX 3: FINISHING KIT

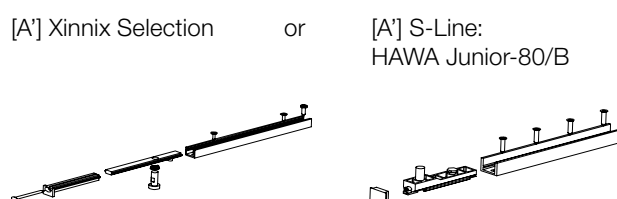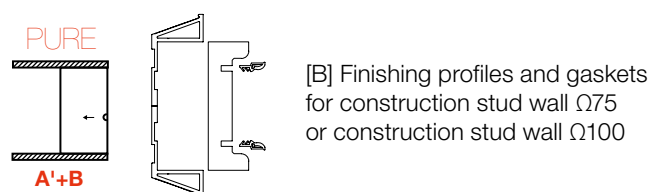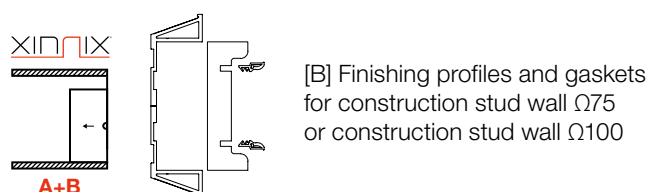



Gen. Deprezstraat 2
8530 Harelbeke Belgium

Tel.: +32 (0)56 735 000
Fax: +32 (0)56 720 270

info@xinnix.eu
www.xinnix.eu

All trademarks are registered trademarks. Technical improvement and product development may cause technical changes. This document is made to inform you in the best way but contains no liability due to printing errors or technical changes beyond our competence. This information is based on the product properties in 2014. Reprint, reproduction or translation, partly or completely, is not allowed without the written permission of Xinni Door Systems bvba.